

# ok.

## OWM 170G-W

### MIKROWELLENOFEN // MICROWAVE OVEN // SPANISH // FRENCH



**DE** GEBRAUCHSANWEISUNG

**EL** ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ

**EN** USER MANUAL

**ES** MANUAL DEL USUARIO

**FR** MODE D'EMPLOI

**HU** HASZNÁLATI ÚTMUTATÓ

**IT** MANUALE UTENTE

**NL** GEBRUIKSAANWIJZING

**PL** INSTRUKCJA OBSŁUGI

**PT** MANUAL DO UTILIZADOR

**SV** BRUKSANVISNING

**TR** KULLANIM KILAVUZU

# ok.

---

Deutsch	-
Ελληνικά	-
English	-
Español	-
Français	-
Magyar	-
Italiano	-
Nederlands	-
Polski	-
Português	-
Svenska	-
Türkçe	-

**IMPORTANT SAFETY INSTRUCTIONS.  
READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.**

- Read this manual before first use thoroughly. It contains important information for your safety as well as for the use and maintenance of the equipment.
- Keep this manual for future reference and pass it on with the product.
- Pay particular attention to the warnings on the product and in this manual.
- Use the product only for its intended purpose. Improper use may lead to hazards.
- In the event of improper use or wrong operation, we do not accept any liability for resulting damages.
- The use of accessories and components not expressly recommended by the manufacturer may result in injuries or damages and voids the warranty.
- Never leave the product unsupervised while it is switched on.
- Do not place heavy objects on top of the product.
- Never immerse electrical parts of the product in water during cleaning or operation. Never hold the product under running water.
- Do not under any circumstances attempt to repair the product yourself. For servicing and repairs, please consult an authorised service agent.
- This product is not intended to be used by persons (including children) with reduced physical, sensory or mental abilities or lack of experience and / or lack of knowledge unless they are supervised by a person responsible for their safety or have received instructions on how to use the product.
- Children should be supervised to ensure that they do not play with the product.
- The mains voltage must match the information on the rating label of the product.
- The power plug is used as the disconnect device. Please be sure that the power plug is in operable condition.
- Only unplug from the power socket can separate the product completely from the mains.
- Avoid damages to the power cord that may be caused by kinks or contact with sharp corners.
- Keep this product including power cord and power plug away from all heat sources like for example, ovens, hot plates and other heat-producing products/objects.
- Only unplug from the power socket by the plug itself. Do not pull on the cord.
- Unplug the product ...
  - when the product is not being used,
  - in case of malfunctions,
  - before attaching / detaching accessories and
  - before cleaning the product.
- If the power cord or the casing of the product is damaged or if the product is dropped, the product may not be used before it is examined by an authorised service agent.
- A damaged power cord may only be replaced by the authorised service agent in order to avoid hazards.
- **Caution!** In order to prevent hazards from unintentional resetting of the protective temperature limiter, this product must not be powered by an external switching device such as a timer, or connected to a circuit which is regularly switched on and off by a device.

- Use this product in dry indoor areas only and never outdoors.
- Place the product on a flat, sturdy and slip-resistant surface.
- Keep a minimum safety clearance of 15 cm around the product.
- Protect this product from extreme heat and cold as well as from direct sunlight and dust.
- In order to reduce the risk of fire and electric shock, do not expose the product to fire (fireplace, grill, candles, cigarettes and so on) or water (water drops, water splashes, vases, tubs, ponds and so on).
- **Warning!** Do not use this product near water or heavy moisture; e.g. in a damp basement or beside a swimming pool or bathtub.
- Use this product in temperate latitudes only. Avoid tropical and especially humid climatic regions.
- Protect this product from all moisture including spray water and humidity.
- The product may not come into contact with or be covered by highly flammable materials, such as curtains, textiles, walls, etc. Please make sure that sufficient safety clearance is kept to flammable materials.
- This product is not suitable for commercial use. It is designed for household use only.
- **Risk of burning!** Do not touch the product's hot surfaces. Heat rises from the product during use.
- **Caution!** Hot surface!
- Do not operate the product by means of an external timer or separate remote control system.
- **Risk of burning!** Do not touch the product's hot surfaces. Touch the product only by its handle or temperature dial.
- Never cover the product while in use.
- The door or the outer surface may get hot when the product is operating.
- Bread can burn. Therefore, do not use this product near or below flammable materials such as curtains. Please be sure to keep a sufficient safe distance from flammable materials.
- Handle the glass door with care. To prevent damage, do not slam the door and do not let the glass door come in contact with water while it is still hot.
- **Warning!** Accessible parts may become hot during use. Young children should be kept away.
- Do not move or transport this product while it is in use.
- To avoid injury, exercise caution when removing hot items from the product.
- The product is not intended to be used for heating purposes.
- **Warning!** If the door or door seals are damaged, the oven must not be operated until it has been repaired by an authorised service agent.
- **Warning!** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- **Warning!** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- **Warning!** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

- Only use utensils that are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- If smoke is emitted switch off or unplug the product and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- The oven should be cleaned regularly and any food deposits removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- The microwave oven shall not be placed in a cabinet.
- **Warning!** When the product is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
- Clean the product and all other accessories after each use.
- Follow the instructions in the chapter **Cleaning and care**.

## CONGRATULATIONS


Thanks for your purchase of **ok.** product. Please read this manual carefully and keep it for future reference.

## INTENDED USE

This product is intended for defrosting, reheating and cooking food. Any other use may result in damage to product or injuries.

## COMPONENTS

The product may be available in different colors.

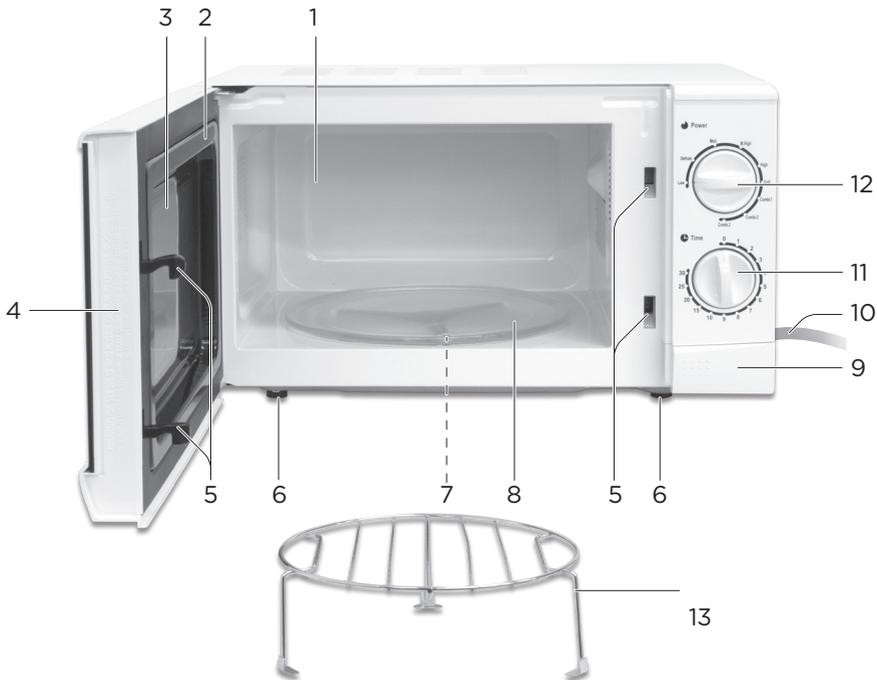

- |                            |                           |
|----------------------------|---------------------------|
| 1. Oven cavity             | 7. Turntable roller       |
| 2. Door sealing            | 8. Glass tray             |
| 3. Door window             | 9. Open door push button  |
| 4. Door                    | 10. Power cord with plug  |
| 5. Safety Interlock system | 11. TIME selector switch  |
| 6. Feet                    | 12. POWER selector switch |
|                            | 13. Metal rack            |

## BEFORE FIRST TIME USE

Inspect the delivery contents for completeness and damages. Should the delivery contents be incomplete or damaged, contact your sales outlet immediately.


After unpacking, please refer to chapter **Cleaning and care**.

**INSTALLATION**



**1**

Place the microwave on a flat, stable surface.

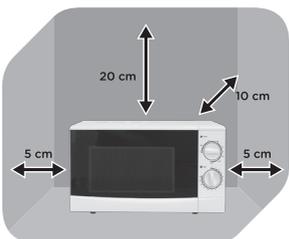


**2**

Leave space for sufficient airflow. 20 cm above the oven, 10 cm at the back, 5 cm at both side.



**3**

Do not cover or block any vents on the unit. Do not remove feet.

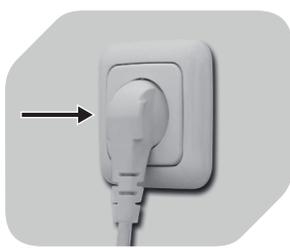

**4**

Before use, plug in the unit. Unplug when not using for a long time.


**NOTE**

- Make sure that all packaging materials including tape are removed from the door, cavity, switches and accessories.
- Do not place the oven where heat, moisture or high humidity are generated, or near combustible materials.
- Do not operate the oven without turntable roller on the shaft and glass tray in proper positions.
- Make sure that the supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
- The mains plug must be readily accessible so that it can be easily disconnected in an emergency.

**GROUNDING INSTRUCTIONS**


- The supply cord of the oven is equipped with a plug with earth connection, which must be plugged into a properly installed and grounded wall outlet.
- It is recommended that a separate circuit serving only the oven be provided.
- High voltage is dangerous and may result in fire or other accidents, causing property damage or injuries.
- **Warning!** Improper use of the grounding plug can result in a risk of electric shock.

## CONTROL PANEL

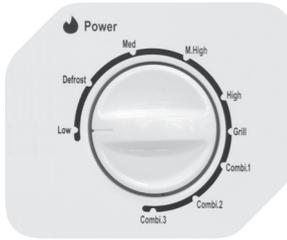

### Power selector switch


Turn switch to select power level for cooking or defrosting. Please refer to chapter **MICROWAVE COOKING**.

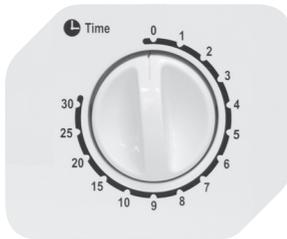

### Time selector switch


Use TIME selector switch to switch oven on or off (0). Turn clockwise to select cooking duration (minutes). To set short time periods, first turn switch to position 5, and then turn back to the desired lower setting. When cooking duration has elapsed (0), the oven will switch off automatically. You may terminate cooking process at any time by turning the switch manually back to position 0.

## MICROWAVE COOKING

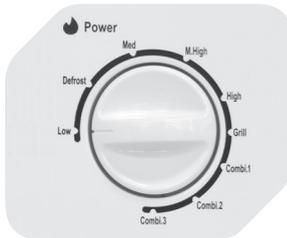

**1**

Use POWER selector switch to select power level.

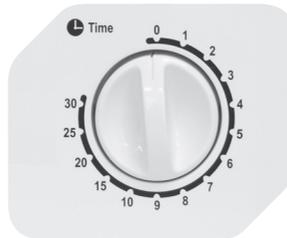

**2**

Use TIME selector switch to set cooking duration.


### NOTE

A short supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. If an extension cord is used:

- The electrical rating should be at least as great as the electrical rating of the product.
- The extension cord must be a grounding-type 3-wire cord.
- The cord should be arranged so that it will not drape over counter tops or table tops, where it can be pulled on by children or tripped over unintentionally.


Mode	Power level
Low	18 %
Defrost	36 %
Med (medium)	58 %
M. High (medium-high)	81 %
High	100 %

## GRILLING

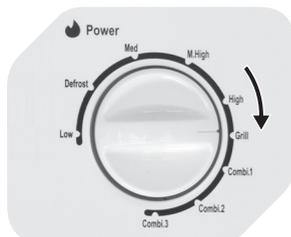

1

Use POWER selector switch to select grill.

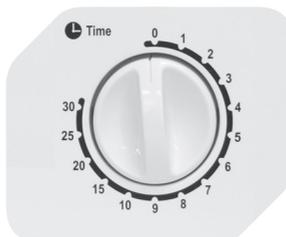

2

Use TIME selector switch to set cooking duration.

### NOTE

The metal rack can be used for grilling.


### Mode

Grill

### Power level


100 %

## COMBINATION COOKING

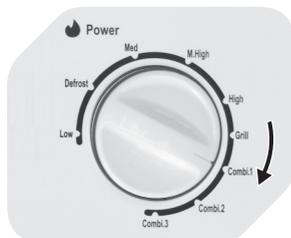

1

Use POWER selector switch to select power level.

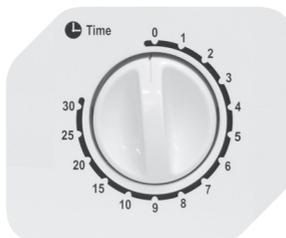

2

Use TIME selector switch to set cooking duration.

### NOTE

The metal rack can be used for combination cooking.

### Mode

Combi.1

### Power level

30 % Microwave /  
70 % Grill

### Suitable for

Fish, potatoes au  
gratin

Combi.2

49 % Microwave /  
51 % GrillOmelette, baked  
potatoes

Combi.3

67 % Microwave /  
33 % Grill

Poultry

## UTENSILS GUIDE

Utensils	Microwave	Grill	Combination
Heat-resistant glass	yes	yes	yes
Non heat-resistant glass	no	no	no
Heat-resistant ceramics	yes	yes	yes
Microwave-safe plastic dish	yes	no	no
Kitchen paper	yes	no	no
Metal tray	no	yes	no
Metal rack	no	yes	no
Aluminum foil & foil containers	no	yes	no

## CLEANING AND CARE

- **Warning!** Unplug the product and let it cool down completely before cleaning. Never immerse electrical parts of the product in water during cleaning or operation. Never hold the product under running water.
- **Warning!** When cleaning, never use solvents or abrasive materials, hard brushes, metallic or sharp objects. Solvents are harmful to human health and can attack plastic parts, while abrasive cleaning mechanisms and tools may scratch the surface(s).
- Clean the product's exterior surfaces with a slightly damp cloth and then dry them thoroughly.
- Make sure that no water enters the product interior (for example, through the switch).
- Clean the cavity, the door seals and adjacent parts regularly with a damp cloth. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth.
- Wipe the cavity dry afterwards using a soft cloth.
- The glass tray can be removed for cleaning. Clean the tray in warm, soapy water or in the dishwasher.
- Clean the metal rack in warm, soapy water.
- The turntable roller and the cavity bottom should be cleaned regularly to prevent excessive noise. Simply use a mild detergent to wipe the surface and allow it to dry. If the turntable roller is removed for cleaning, make sure to re-insert it properly before next use.
- In the event that the light bulb inside the cavity must be replaced, please contact authorised service agent.
- Odours in the cavity can be neutralized by filling a microwave-suitable cup with water and lemon juice and boiling it in the microwave oven for 5 minutes.

---

**SPECIFICATION**

Rated voltage: 230-240 V~, 50 Hz / Rated power input: 1200 W (Micro) 900 W (Grill)  
/ Rated power output: 700 W / Operation frequency: 2450 MHz / Outside dimensions:  
262 mm (H) x 452 mm (W) x 325 mm (D) / Turntable Diameter: Ø 245 mm / Oven  
capacity: 17 L / Net weight: Approx. 11.3 kg

---

**DISPOSAL**

Do not dispose of this appliance as unsorted municipal waste. Return it to a designated collection point for the recycling of WEEE. By doing so, you will help to conserve resources and protect the environment. Contact your retailer or local authorities for more information.



OMW170G-W.13.03.28(1.1)



Imtron GmbH  
Wankelstrasse 5  
D-85046 Ingolstadt

